



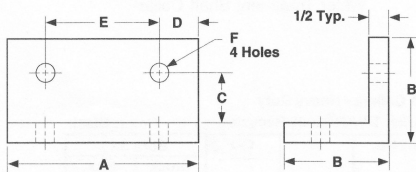


# Waste Water Treatment Components


## Waste Water Wear Shoes

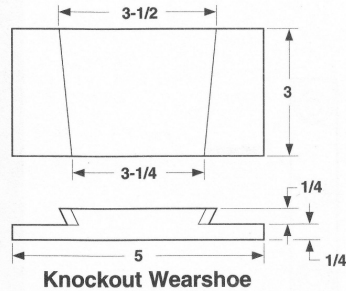

Part Number	A	B	C	D	E	F
SCWS 0001	5-1/2"	3"	1-5/16"	7/8"	3-3/4"	1/2"
SCWS 0550	5-1/2"	3"	1-3/8"	7/8"	3-3/4"	1/2"
SCWS 0600	6"	3"	1-3/8"	1-1/8"	3-3/4"	1/2"

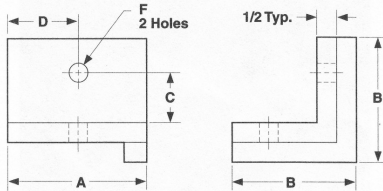

Part Number	A	B	C	D	E	F
SSHRW 001	4"	3-1/2"	1-5/16"	2"	-	1/2"
SSHRW 002	4"	3-1/2"	1-3/8"	2"	-	1/2"
SSHRW 003	4-1/2"	3-1/2"	1-3/8"	2-1/4"	-	1/2"

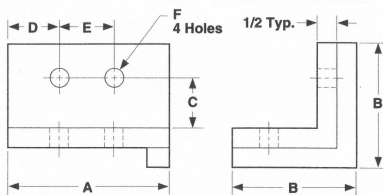

Part Number	A	B	C	D	E	F
SDHRW 0040	4"	3-1/2"	1-3/8"	7/8"	2"	1/2"
SDHRW 0450	4-1/2"	3-1/2"	1-3/8"	7/8"	1"	1/2"
SDHRW 0600	6"	3-1/2"	1-3/8"	1-1/8"	3-3/4"	1/2"

Slideways, Inc. 705 Plantation Street Worcester, MA 01605

Phone: 800-298-7543 Fax: 508-854-0711 [www.slideways.com](http://www.slideways.com)